



ARROWHEAD
R O C K D R I L L



R70
Hydraulic Hammer
Parts Manual




ARROWHEAD
ROCK DRILL

R70 PARTS LIST

Diagram Number	Part Number	Description	Quantity
1	1061301	Moil Point	1
2	1062102	Chuck Housing	1
3	1052311	Tool Retainer	1
4	1011104	Grease Nipple	1
5	1062106	Lower Cylinder Liner	1
6	1052101	Main Body	1
7	1061104	Piston	1
8	1051105	Upper Cylinder Liner	1
9	1051107	Disc Spring Washer	2
10	1051108	Spacer	1
11	1052103	Cylinder Head	1
12	1051201	Valve Housing	1
13	1051202	Valve Bottom Plate	1
14	1051203	Valve Top Plate	1
15	1051204	Valve Spool	1
16	1051205	Plunger	1
17	1011203	Valve Plate Bolts	8
18	1011201	Pressure Plug	1
19	1011113	Gas Valve Adaptor	1
20	1011105	Gas Valve Assembly	1
21	1052401	Seal Kit	1
22	1011304	Hose Adaptors	1
23	1011306	Hose Adaptors	1
24	1011216	Cylinder Head Bolt Assembly	8
25	1011204	Valve to Body Bolts	10
26	1011102	Inspection Port Plug	1
27	1011122	Dowel Pins	2
28	1011202	Chuck Retaining Bolt Assembly	1
29	1061302	Chisel	1
30	1061303	Blunt	1
31	1061304	1 Piece Post Driver	1
32	1061305	2 Piece Post Driver	1
33	1061306	Tarmac Cutter	1
34	1061307	Power Fist	1
35	1011302	Tool Retaining Rubber Doughnut	1
36	1052309	Hammer Box	1
37	1062313	Decal Set	1
38	1052310	Lower Buffer	1
39	1052315	Upper Buffer	1
40	1052312	Top Bracket	1
41	1011363	Top Bracket Bolt Assembly	6
42	1011322	Pressure Hose (Europe)	1
43	1011323	Pressure Hose (Europe)	1
44	1011330	Pressure Hose (Americas)	1
45	1011331	Pressure Hose (Americas)	1
46	1011112	Gas Valve Spring	1
47	1011111	Gas Valve Shuttle	1
48	1011110	Gas Valve Small O Ring	1
49	1011108	Gas Valve Large O Ring	2
50	1011109	Gas Valve Dowty Washer	1
51	1011107	Gas Valve Body	1
52	1011106	Gas Valve Dust Cap	1






ARROWHEAD
ROCK DRILL

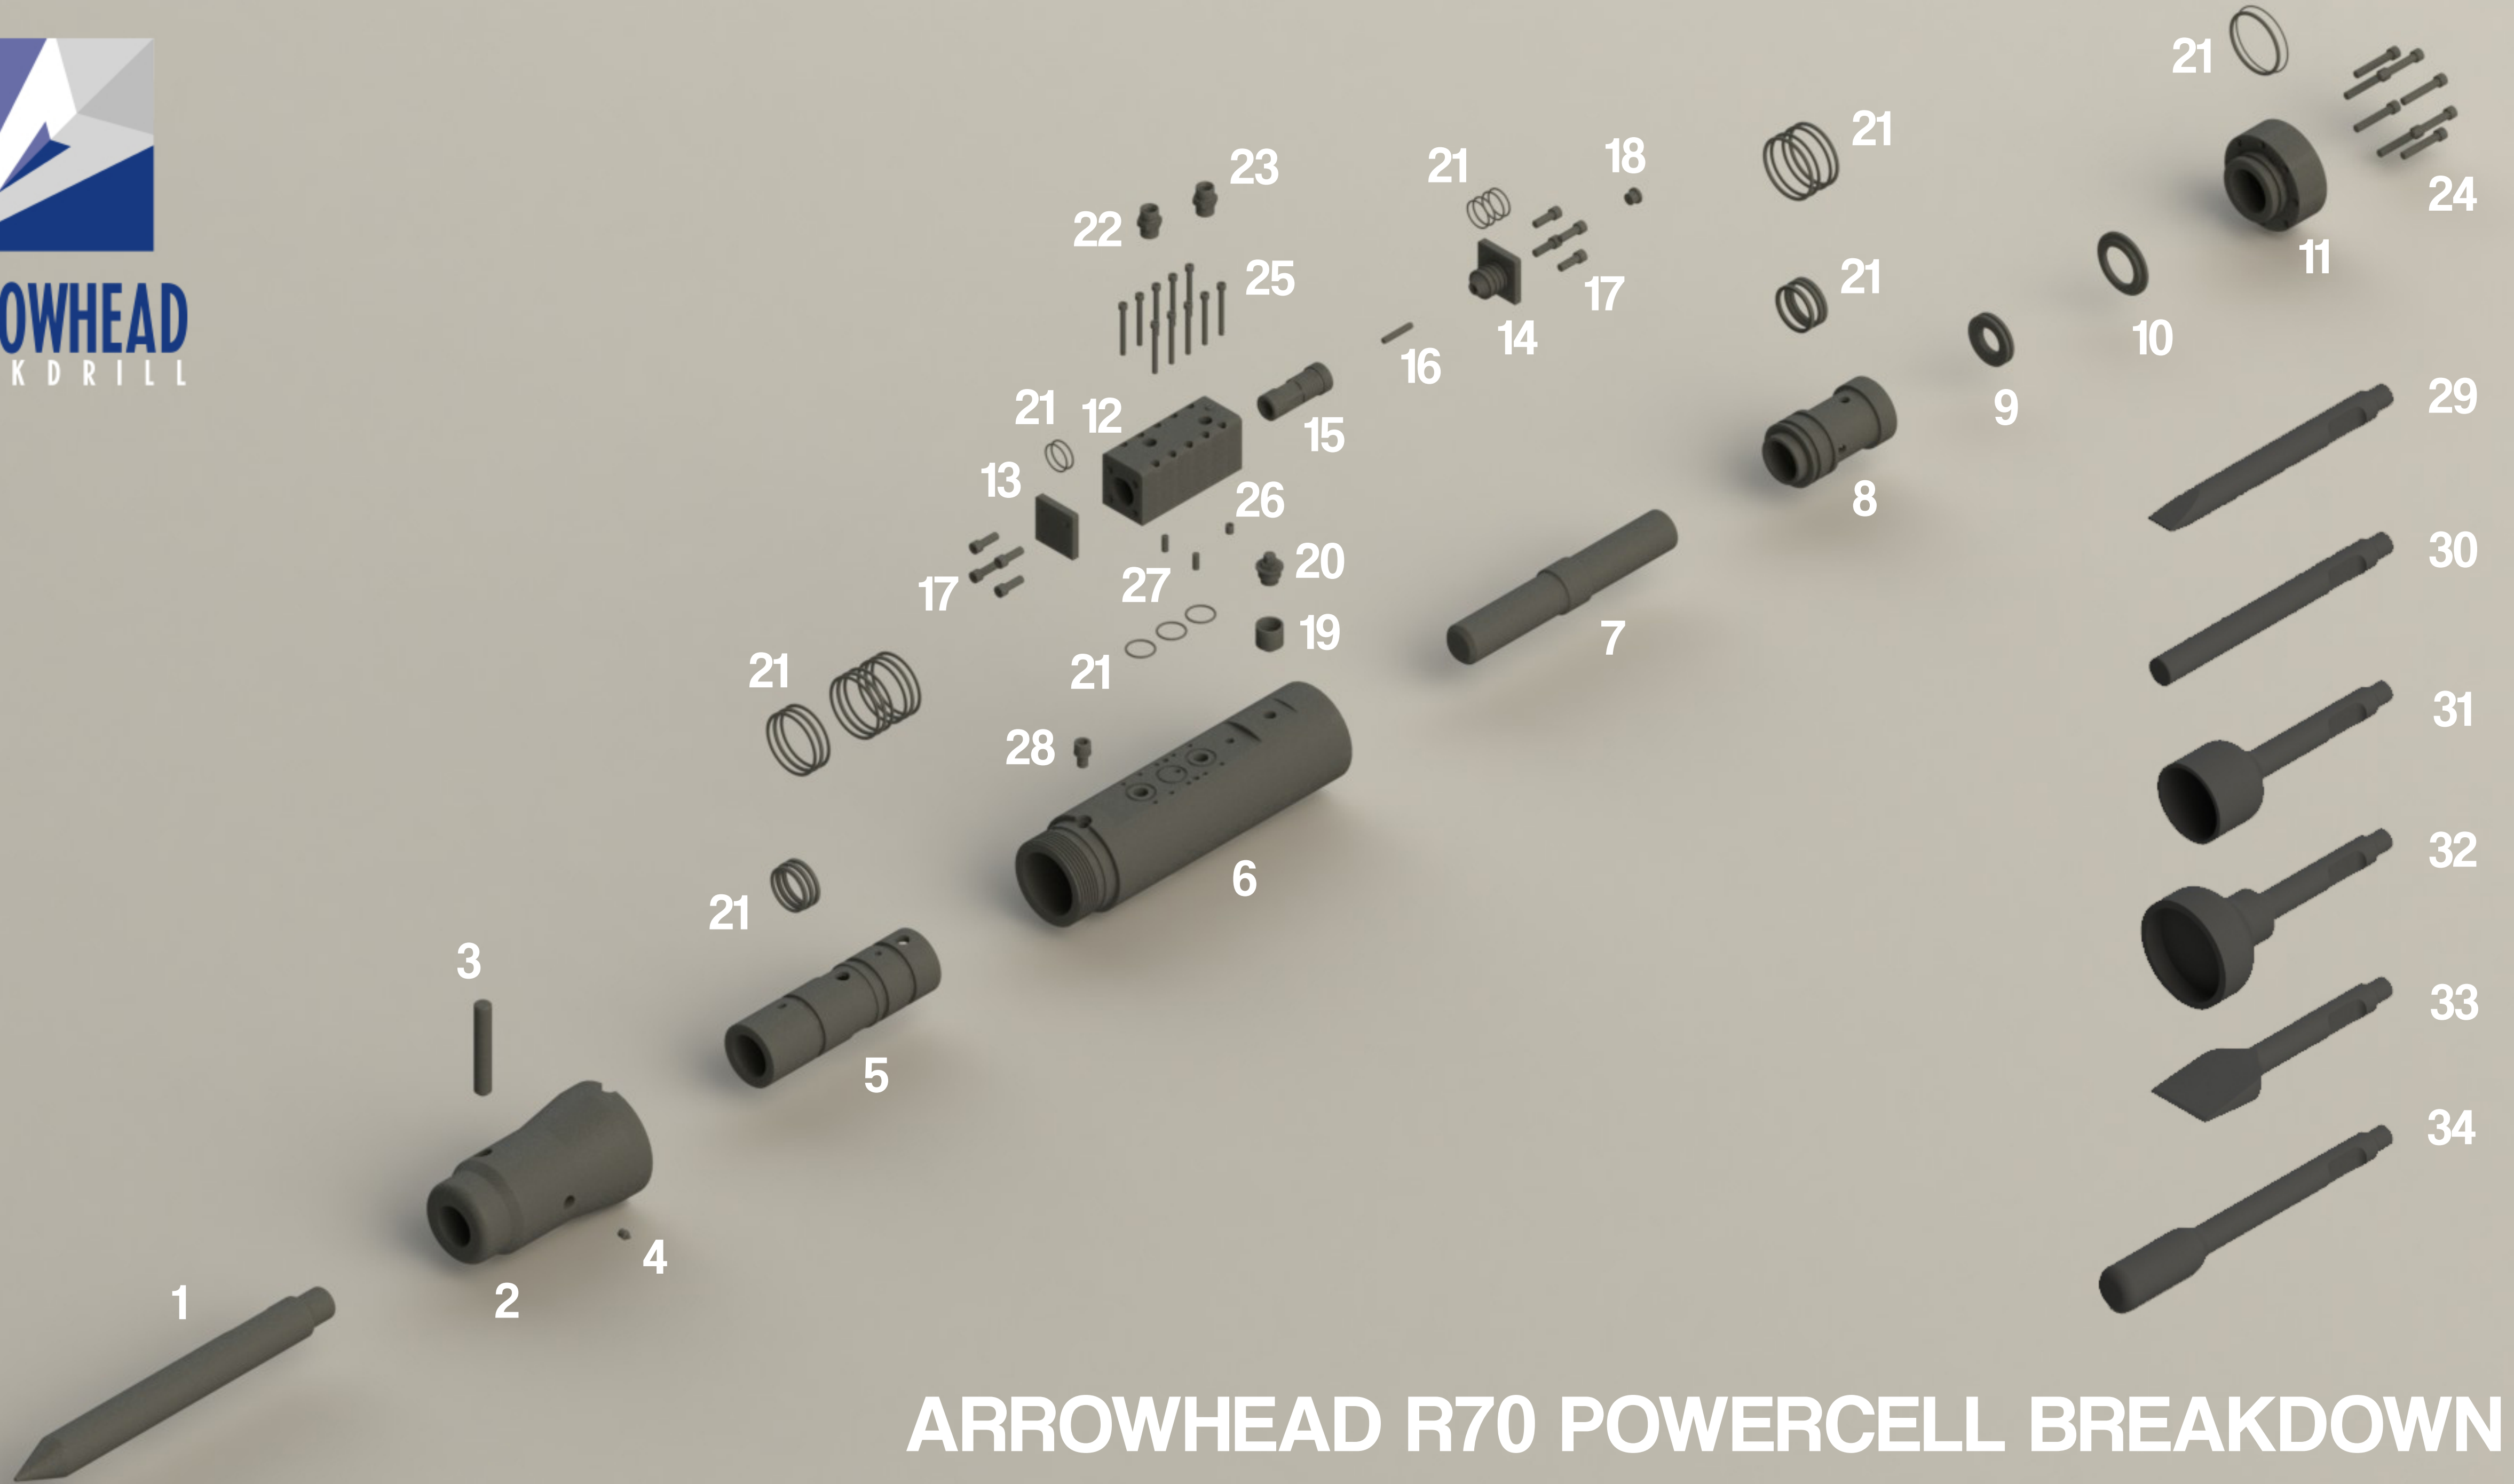

ARROWHEAD R70 POWERCELL BREAKDOWN




ARROWHEAD
ROCK DRILL

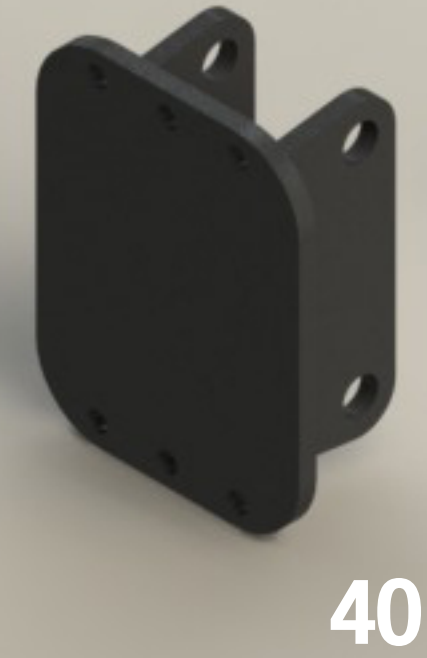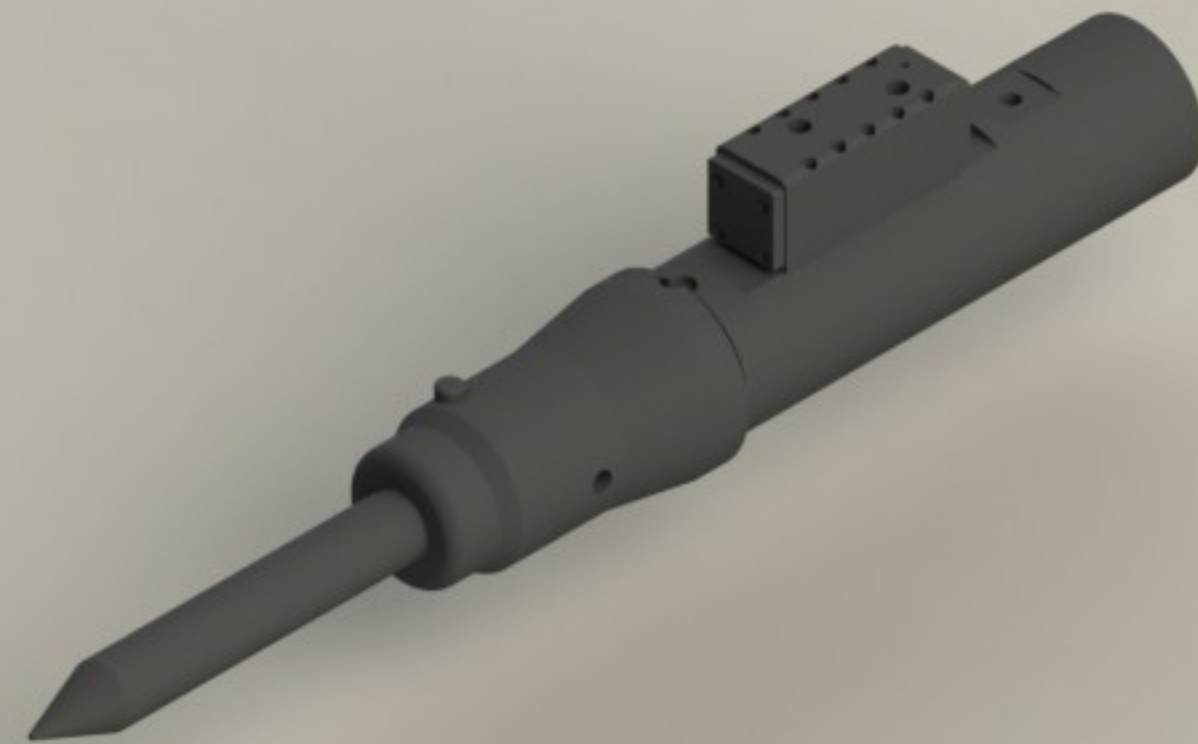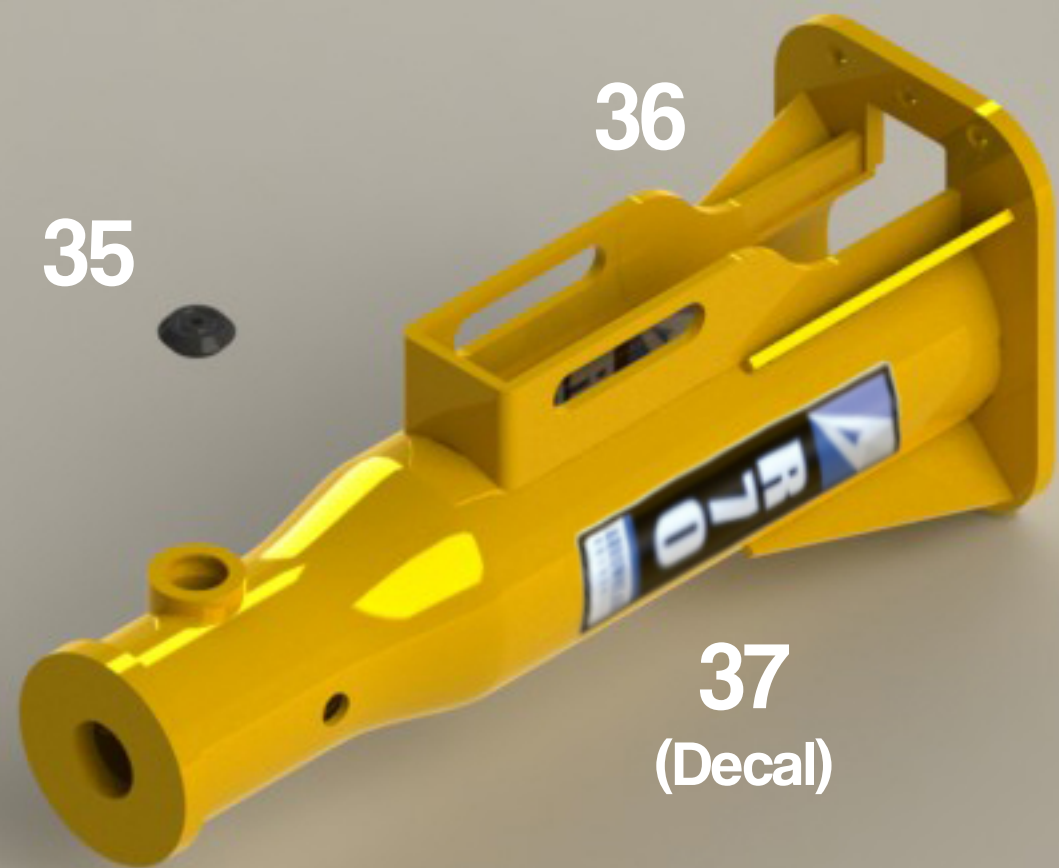

ARROWHEAD R70 HAMMER BREAKDOWN



ARROWHEAD
ROCKDRILL

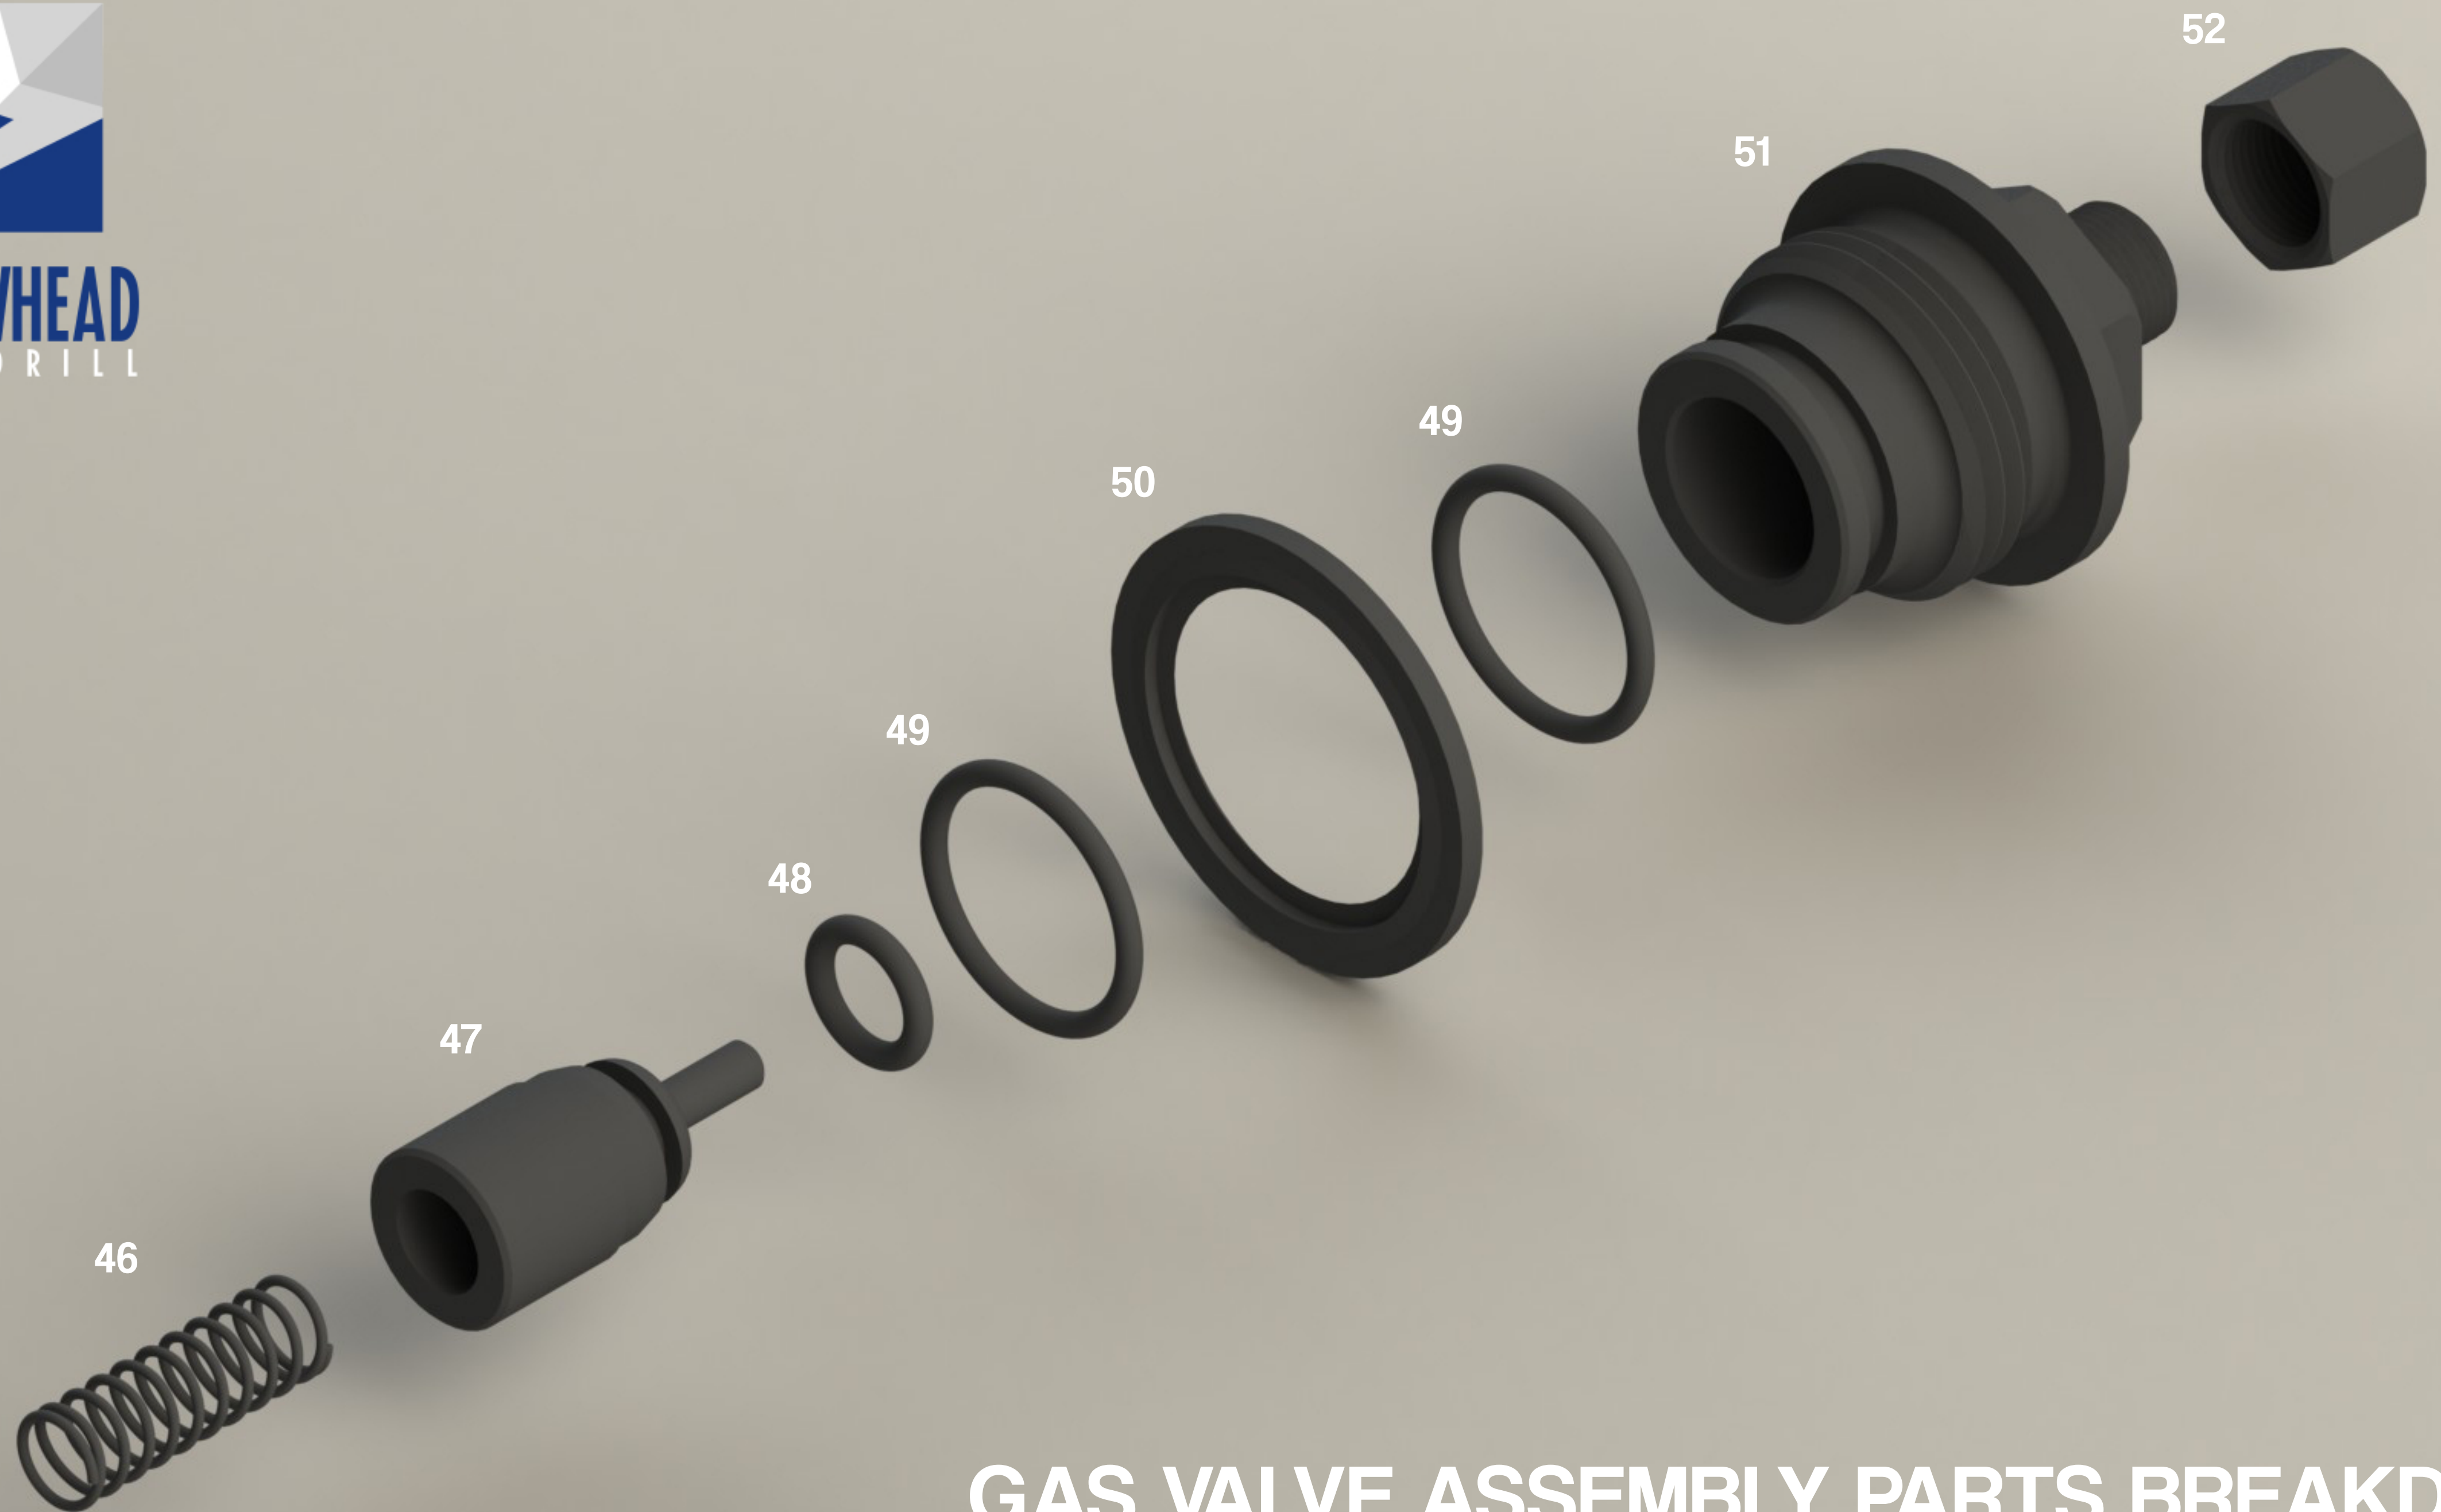

GAS VALVE ASSEMBLY PARTS BREAKDOWN